

## OPTIO WP FIRMWARE UPDATE V.1.01

---

### CHANGES:

- We added an automatic tracking autofocus\* function to the AF SETTING menu of the camera.  
\* *Automatic tracking AF allows the camera to track focus on a moving subject until the picture is taken.*  
*Note: automatic tracking AF is not available in Green mode, Fireworks mode, or Picture voice.*
- 


### INSTRUCTIONS

1. Please click the download link at the bottom of this page, and save the download file **ow\_e101w.exe** to your Desktop.



ow\_e101w.exe

2. Double click the **ow\_e101w.exe** file to decompress it. Click the OK button.

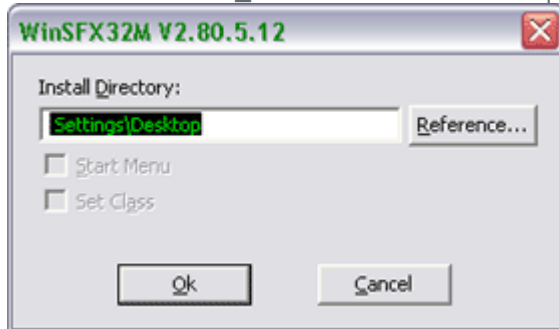


3. You will now see the following expanded files:




Note that the **fwdc134p.bin** file, circled above, is the firmware update. The **readme.txt** file contains instructions, similar to this page, which you may want to review.

4. Connect your Optio WP camera to the computer according to the instructions in the *PC Connection Manual*. The camera will become a removable disk drive in the My Computer window. Copy the

 **fwdc134p.bin** file to the camera's removable disk drive.

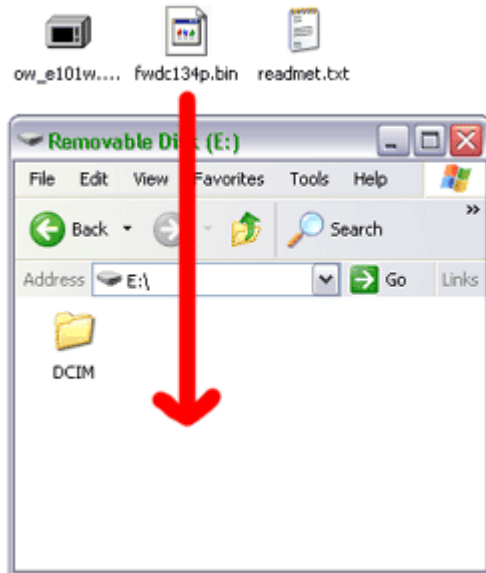

5. You will now have the **fwdc134p.bin** firmware file on the removable disk, which is the camera's memory. Note that the **fwdc134p.bin** file should be on the top or "root" level of the removable disk drive as shown below. That is, it cannot be located inside of any sub-folders on the removable disk.

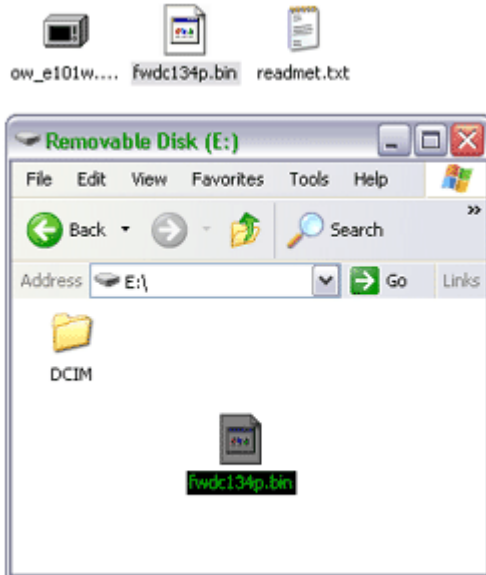

6. Now, disconnect your camera from the computer. You are ready to install the firmware update. For these next steps, we strongly recommend the use of an optional AC adapter or a fully charged camera battery.
7. Press your camera's MENU button, and while holding down the MENU button, turn the camera on. Once your camera turns on and displays text on the LCD screen, you can release the MENU button.
8. You will see the following text displayed on your LCD screen:

```
PROGRAM UPDATE
YES
NO
NEW VERSION IS
VER 1.01
```

Use your four-way controller to select YES, and then press your OK button.

9. You will see "NOW LOADING" on the LCD screen for approximately 90 seconds. Be careful to not interrupt power to the camera while the new firmware is loading. When the procedure is complete, the LCD screen will say "COMPLETE" and you can turn the camera off.
10. Now, turn your camera on normally (i.e. without holding down the MENU button). Be sure to format your camera's memory to erase the firmware file. We also recommend resetting your camera settings. You're finished, congratulations.

---

MACINTOSH USERS can follow this same process after clicking on the Macintosh download link below.

- Download and save the Macintosh download file.
- Double click it, to decompress it with your Stuffit expander program.
- Connect the camera to the computer.
- Copy the firmware file (**fwdc134p.bin**) to your camera's drive, then disconnect the camera from the computer.
- Proceed with the installation of the firmware as outlined above.

---

I have read the above instructions.

- [DOWNLOAD WINDOWS FILE](#) (1.8 MB)
- [DOWNLOAD MACINTOSH FILE](#) (2.3 MB)

Copyright 2005 Pentax Corporation. All rights reserved.

"Pentax" and "Optio" are trademarks of Pentax Corporation.

Other product and company names shown here are trademarks or registered trademarks of their respective companies.