

## **CARE AND MAINTENANCE TIPS FOR PENTAX OptioWP**

- The OptioWP has a waterproof capability equivalent to JIS class 8 (IP58) to let you take pictures at a depth of 5 feet (1.5 m) continuously for 30 minutes.
- To ensure optimal performance, before using the OptioWP, be sure the water resistant seals around the battery/card cover are free of any sand or other debris.
- Be sure to check that the battery/card cover is securely locked prior to using the OptioWP where it is likely to get wet or dirty.
- Completely dry the camera before changing the battery or SD card.
- When the OptioWP has been exposed to salt water we recommend rinsing the sealed camera under tap water followed by soaking in a bowl of clean water for 2-3 minutes. Please consult your instruction manual for complete care and maintenance recommendations.